HEFS Graphics Generator Products Installation Guide

Version: HEFS 1.2.1

Release Date: 28 October 2014

National Weather Service Office of Hydrologic Development


Table of Contents

1	Ove	rview	3
	1.1	Notation	5
	1.2	Terminology	5
	1.3	Directories of Note	6
	1.4	Pre-installation Steps	6
	1.5	Affected Configuration Files	7
2	Con	figuring HEFS Products	9
	2.1	Copy New Files and Directories (Required)	9
	2.2	Create Installation <products_dir> (Required)</products_dir>	10
	2.3	Modify SA Global Properties (Required)	10
	2.4.1 2.4.2 2.4.3	Modify File Added in Step 2.1: IdExportHEFSGraphGen.xml (Optional)	11 19
	2.5	Complete HEFS Product Configuration (Required)	22
	2.6	Verify HEFS Product Configuration (Required)	26
3	Sett	ing Up Automated Graphics Generator Workflows	27
	3.1.1 3.1.2 3.1.3	Modify Existing File: ModuleInstanceDescriptors.xml	28 31
	3.2	Test the Changes	33
4	Synd	chronizing Changes to the Central Server	34
	4.1	Create Central <pre></pre>	34
	4.2	Modify FSS Global Properties (Required)	34
	4.3	Synchronize Configuration Changes (Required)	35
5	Cred	nting the Scheduled Task	36
6	Tips	and Trouble Shooting	37
	6.1	Tips	37
	6.1.1 6.1.2	· ·	
	6.2	Troubleshooting	46


1 Overview

Delivered with the HEFS release of the MEFP and HEFS EnsPost software are pre-configured Graphics Generator products designed to display the following (the Graphics Generator template id is in *italics* and a screen capture is included for each product):


• *MEFP Results*: MEFP generated forecast ensembles of 6-hour FMAP and FMAT time series, intended primarily for diagnostic purposes to confirm reasonable output.

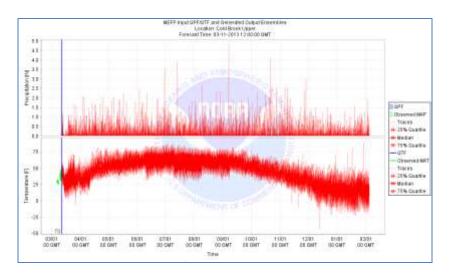


• *HEFS EnsPost Input*: Streamflow ensemble members that are input to the HEFS EnsPost. If HEFS EnsPost is not used, the products can be used to display any streamflow ensemble. Also displayed are an observed time series and single-valued (operational) forecast time series. This is intended primary for diagnostic purposes.

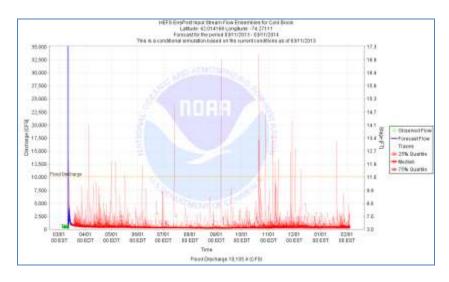

• *HEFS EnsPost Output*: Streamflow ensemble members after post-processing by the HEFS EnsPost. Also displayed are an observed time series and single-valued (operational) forecast time series. This is intended primary for diagnostic purposes.

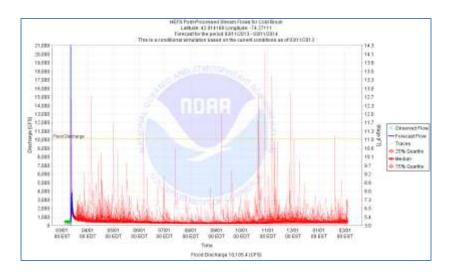

• *HEFS Short-Range Probabilistic Guidance*: A cone of uncertainty computed from an ensemble of streamflow. Also displayed is an observed time series. The ensemble will typically be that output by EnsPost. This is intended to be disseminated to the public as a short-range forecasting product displayed on a website.

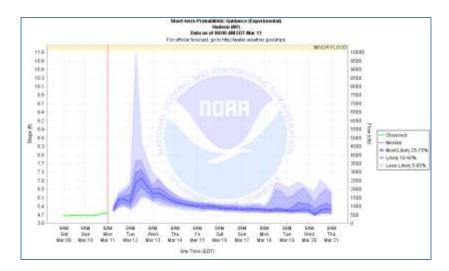

Installing the Graphics Generator HEFS products requires adding and updating FEWS configuration files, and using the FEWS GUI to finalize changes and verify the installation is successful. This guide provides instructions for the following:

- Installing the products for display in the CHPS interface
- Setting up automated workflows for outputting the HEFS products to files
- Adding MEFP Results products for additional catchments

• Turning off products for HEFS components that are not used

The instructions provided below refer to the *Graphics Generator Installation Guide* and *Graphics Generator AHPS Products Installation Guide* as needed. They can be acquired with the latest release of CHPS. Be sure to have a copy on hand when following the instructions below.

In cases where a configuration file is new and generic (valid for all RFCs), the file is included in the release-package and added directly to the configuration. For cases where a configuration change contains text that is specific to an RFC (new or existing file) a description of the text and/or a sample file is provided.


1.1 Notation

Within this document, the following notation is used:

- All graphical interface components are **Capitalized and in Bold**.
- All XML snippets are in this font.
- All command line entries are in this font.
- All important terms defined in Section 1.2 are *italicized* throughout the document.

1.2 Terminology

• active forecast segment: The current active segment, as selected in the **Forecasts Panel** of the CHPS interface and identified by the segment id set in the configuration file <*configuration file*>/RegionConfigFiles/Topology.xml. For example, for ABRFC, the active forecast segment in this case is CBNK1 (Corbin 3W):

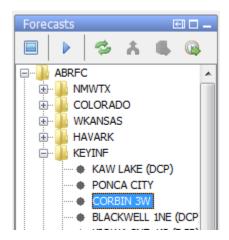

• *identity mapping*: An id-mapping that maps one locationId onto itself; for example

<location external="WALN6DEL" internal="WALN6DEL"/>

- Such mappings may be necessary for Graphics Generator to acquire needed time series; see Section 2.4.2.
- *installation stand-alone*: The stand-alone in which Graphics Generator will be installed, setup in Step 1.4.
- *installation segments*: The ids of the segments for which HEFS is to execute and products are to be generated.
- *thresholdId*: Short-hand for the levelThresholdId defined for a threshold value in *<configuration_dir>*/RegionConfigFiles/ThresholdValueSets.xml.

1.3 Directories of Note

The following directories will be referred to in the instructions provided below:

- < region_dir>: The installation stand-alone region home directory, typically "##rfc sa".
- < configuration_dir>: The stand-alone Config directory, typically < region_dir>/Config.
- <tar_root_dir>: The directory where the HEFS release package was untarred.
- cproducts_dir>: The directory selected to hold HEFS products output by Graphics
 Generator, including image files, during testing in the installation stand-alone; see
 Section 2.2.

1.4 Pre-installation Steps

- 1. Acquire the *Graphics Generator Installation Guide*, *Graphics Generator AHPS Products Installation Guide*, and *Graphics Generator Tips and Troubleshooting Guide* from the most recent CHPS release.
- 2. Install the HEFS release as described in the HEFS Install Notes, if not already installed.
- 3. Create an *installation stand-alone* for initial installation of the HEFS Graphics Generator products. It should be created from an operational stand-alone that includes all desired HEFS components, MEFP and/or EnsPost, configured for the *installation segments*. In addition to HEFS components, the stand-alone must include:
 - Graphics Generator components configured to appear in the CHPS interface. See the *Graphics Generator Installation Guide*.
 - AHPS products installed as per the instructions in the *Graphics Generator AHPS Products Installation Guide*. The HEFS products depend upon settings configured for the AHPS products.
 - A localDataStore containing data necessary for the products to display. If the HEFS Graphics Generator products for the MEFP, MEFP-based streamflow forecasts, and/or

EnsPost are to be displayed, then the localDataStore must contain, respectively, MEFP generated forecast ensembles, MEFP-based generated streamflow ensembles, and/or EnsPost post-processed streamflow ensembles.

Configuration changes made here will later be ported to an OC for synchronization to the central server, but only after installation is successful on a stand-alone.

1.5 Affected Configuration Files

The diagram in Figure 1 summarizes all configuration files created or modified by the installation steps provided in this document. The directory structure shown includes all directories affected by any HEFS component. Files with a light red background are new for this release, while those with a light blue background are specific to each RFC and require editing. Note the following:

- The directory "**FGroup>**" was renamed during installation of the MEFP data ingest components to match the first forecast group for which MEFP will execute.
- The directory corresponding to <mefp_root_dir> is used by the MEFP and MEFPPE and will not be used herein.
- The directory corresponding to **<ens_post_root_dir>** is used by the EnsPost and EnsPostPE application and will not be used herein.
- The directories shown under <region_dir>/Import were created during installation of the HEFS components and will not be used herein.

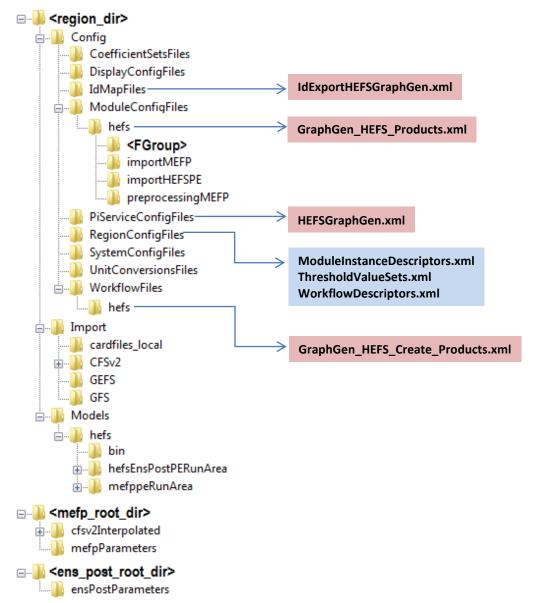


Figure 1: Configuration files created or modified during installation.

2 Configuring HEFS Products

This section provides general instructions for installing HEFS products provided in this release.

EARLIER VERSIONS OF PRODUCTS ALREADY INSTALLED

Throughout this and later sections, specific instructions intended for those who already have installed HEFS products will be provided in boxes like this one. Be sure that the installation stand-alone can display those earlier versions of the HEFS products.

The steps to perform are as follows (see the noted section for more information):

- 1. **Section 2.4.1**: Ensure that queries added for the current release are properly defined. See Section 2.4.1 for more information.
- 2. **Section 2.4.2**: Skip.
- 3. **Section 2.4.3**: Ensure that the time series returned by the queries OBSERVED FLOW and/or OPERATIONAL FLOW FORECAST include thresholds for the products with template ids that start with "HEFS EnsPost". Ensure that the time series returned by the query SHORT-RANGE OBS FLOW includes thereholds for the products with the template id "HEFS Short-Range Probabilistic Guidance".
- 4. **Section 2.5**: Perform <u>all</u> steps to complete the configuration. Note that most settings will already be specified correctly; only the settings related to arguments and products new for this release will require changes. This affects Steps 4 and 5. See Section 2.5 for more information.
- 5. **Section** Error! Reference source not found.: Modify the pattern used to match changes to product templates for this release. See Section

2.1 Copy New Files and Directories (Required)

Action: Execute the following command to copy *all* new files and directories that are necessary for generating the HEFS products into the *installation stand-alone* directory structure

```
cd <tar_root_dir>/graphgen
cp -r Config <region_dir>/.
```

No existing files are overwritten or removed by these commands.

2.2 Create Installation create Installation create Installation

Action: Create the HEFS products directory for installation testing:

mkdir < region_dir > /Export/products

Description: The directory created above will store Graphics Generator generated products created during testing within the *installation stand-alone*. It is referred to below as *products_dir>*.

2.3 Modify SA Global Properties (Required)

Action: Modify the file

<region_dir>/sa_global.properties

Add the following properties:

HEFS_PRODUCTS_DIR=%REGION_HOME%/Export/products

2.4 Configuration File Changes

Described below are changes that must be made to the configuration files in order for the Graphics Generator HEFS products to be generated.

2.4.1 Modify File Added in Step 2.1: HEFSGraphGen.xml (Required)

EARLIER VERSIONS OF PRODUCTS ALREADY INSTALLED

Only queries added for the current release require updating. For example, the SHORT-RANGE OBS FLOW and SHORT-RANGE ENSEMBLE FLOW queries (see below) are new for release HEFS 1.2.1.

Action: Modify the PI-service queries (if needed) defined in the file

<configuration_dir>/PiServiceConfigFiles/HEFSGraphGen.xml

so that the time series and ensembles used to generate the HEFS graphics generator products can be acquired via the FEWS PI-service. The default file contents are provided below.

Description: The HEFS products are constructed using time series and ensembles returned by the following queries defined in HEFSGraphGen.xml (listed by their <id> XML element):

TIPS (read these before proceeding):


- The query id below is the value of the id XML element within the timeSeries XML element defined within the HEFSGraphGen.xml file.
- Location sets "Catchments_HEFS" and "Gages_HEFS" mentioned below should have been defined when configuring MEFP and EnsPost. See the *MEFP Configuration Guide: Data Ingest* and *EnsPostPE Configuration Guide*, respectively. It may be necessary to copy the definition of the Gages_HEFS location set from the *parameter estimation standalone* used in configuring the EnsPostPE to the *installation standalone* used here.
- Module instance sets "EnsPost_Input" and "EnsPost_Output" mentioned below should have been defined when configuring the EnsPost. See the *EnsPost Configuration Guide*.
- All queries for observed data are optional and should be included only if a frame of reference is desired and an appropriate time series exists.
- If the RFC QPF or RFC QTF forecast sources are used, then the queries with ids "MEFP QPF INPUT" and "MEFP QTF INPUT" should be specified appropriately (see below). If not, then they are optional and should be defined only if an appropriate time series exists and if the user would like to see QPF and QTF as a frame of reference when viewing MEFP output for diagnostic purposes.
- It may be necessary in some cases to define multiple timeSeriesSet XML elements within the timeSeries XML elements specifying the PI-service queries. This is always true if a query must return time series for multiple parameters, such as SQIN and QINE for streamflow queries, or must return time series with different time steps (such as 6-hour and 1-hour time steps). See Sections 2.1.1 and 2.1.2 of the *Graphics Generator Tips and Troubleshooting Guide* for tips related to including multiple timeSeriesSet XML elements inside a single query and making use of module instance sets and location sets, if additional sets are needed.

- Note the locationIds of the time series returned within the four "FLOW" queries. If the locationIds are not identical to the segment ids of the segments involved, then an id-mapping may need to be defined (see Section 2.4.2 for specific condition) or the defaultLocationId setting (see Section 2.5) may be need to be modified.
- Forecast (simulated forecasting) time series can only be acquired from the FEWS PI-service if the workflow that generates the time series is approved.

Query Id	Recommended Value	Description
MEFP OBS PRECIP TS	RFC-specific. May be able to use the output from a MergeMAP or MergeMAPX module.	Observed precipitation (MAP) data that is displayed on the MEFP Results product as a reference. May make use of location set "Catchments_HEFS".
MEFP QPF INPUT	RFC-specific. If RFC QPF forecast source is used, should be set to the RFC time series exported for use as input to MEFP within the module configuration file <fgroup>_MEFP_FMAP_Forecast.xml. See MEFP Configuration Guide: Forecast Components.</fgroup>	This time series is optional, but recommended. Forecast precipitation (FMAP) data that is displayed on the MEFP Results product as a reference. May make use of location set "Catchments_HEFS". This time series is optional, but should be included if the MEFP is executed using the RFC QPF as a forecast source.
MEFP OBS TEMP TS	RFC-specific. May be able to use the output from a MergeMAT.	Observed temperature (MAT) data that is displayed on the MEFP Results product as a reference. May make use of location set "Catchments_HEFS". This time series is optional, but recommended.
MEFP QTF INPUT	RFC-specific. If RFC QTF forecast source is used, should be set to FMAT specified as input to the transformation module configuration file MEFP_RFC_MAT_6to24.xml. See the MEFP Configuration Guide: Forecast Components.	Forecast temperature (FMAT) data that is displayed on the MEFP Results product as a reference. May make use of location set "Catchments_HEFS". This time series is optional, but should be included if the MEFP is executed using the RFC QTF as a forecast source.
MEFP MAP RAW OUTPUT	See the value used in the delivered HEFSGraphGen.xml file.	Do not modify the default timeSeriesSet provided in the delivered HEFSGraphGen.xml. The 6-hour FMAP forecast ensemble output by the MEFP.
MEFP MAT RAW OUTPUT	See the value used in the delivered HEFSGraphGen.xml file.	Do not modify the default timeSeriesSet provided in the delivered HEFSGraphGen.xml. The 6-hour FMAT forecast ensemble output by transforming defined in the module configuration file MEFP_FMAT_Forecast.xml.

OBSERVED FLOW	RFC-specific.	Observed streamflow that corresponds to the time series specified for OPERATIONAL FLOW OUTPUT, below (i.e., has the same time step and units). May make use of location set "Gages_HEFS". May use a module instance set, or require creating a new one. This will not necessarily be the observed streamflow defined as the first timeSeriesSet specified in the exportTimeSeriesActivity within the EnsPost module configuration
OPERATIONAL FLOW FORECAST	RFC-specific. Same as the ensemble (second) timeSeriesSet specified in the exportTimeSeriesActivity within the EnsPost module configuration file but using the ensembleId "main".	The single-valued, operational forecast or simulation corresponding to the ensemble that is input to EnsPost. Should make use of the module instance set "EnsPost_Input" and location set "Gages_HEFS".
FLOW RAW OUTPUT	RFC-specific. Same as the <u>ensemble</u> (second) timeSeriesSet specified in the exportTimeSeriesActivity within the EnsPost module configuration file, which should use ensembleId "MEFP".	The ensemble that is to be post-processed by EnsPost. Should make use of the module instance set "EnsPost_Input" and location set "Gages_HEFS". May require defining new location set if the existing one does not specify the correct locationIds.
FLOW ENSPOST OUTPUT	The same timeSeriesSet specified in the importTimeSeriesActivity within the EnsPost module configuration file, but read only.	The ensemble that is output from EnsPost. Should make use of the module instance set "EnsPost_Output" and location set "Gages_HEFS". May require defining new location set if the existing one does not specify the correct locationIds.
SHORT-RANGE OBS FLOW (added for HEFS 1.2.1)	Identical to OBSERVED FLOW above.	The observed data to displayed on the Short-Range Probabilistic Guidance product. This should be defined identically to the OBSERVED FLOW query, above, but is kept separate in case an independent definition of the query is needed.
SHORT-RANGE ENSEMBLE FLOW (added for HEFS 1.2.1)	Identical to FLOW ENSPOST OUTPUT.	The ensemble data used to compute the cone of uncertainty displayed in the Short-Range Probabilistic Guidance product. This should be defined identically to the FLOW ENSPOST OUTPUT query, above, but is kept separate in case an independent definition of the query is needed.

Standard Location:	Contents:
<pre><configuration_dir>/PiServiceConfigFiles/</configuration_dir></pre>	HEFSGraphGen.xml
	<pre><?xml version="1.0" encoding="UTF-8"?></pre>
	<pre><fewspiserviceconfig <="" pre="" xmlns="http://www.wldelft.nl/fews"></fewspiserviceconfig></pre>
	xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
	xsi:schemaLocation="http://www.wldelft.nl/fews
	http://fews.wldelft.nl/schemas/version1.0/fewsPiServiceConfig.xsd"> <general></general>
	<exportidmap>IdExportHEFSGraphGen</exportidmap>
	Most queries used by the HEFS Graphics Generator products are configured in this file. The only queries not configured herein</p

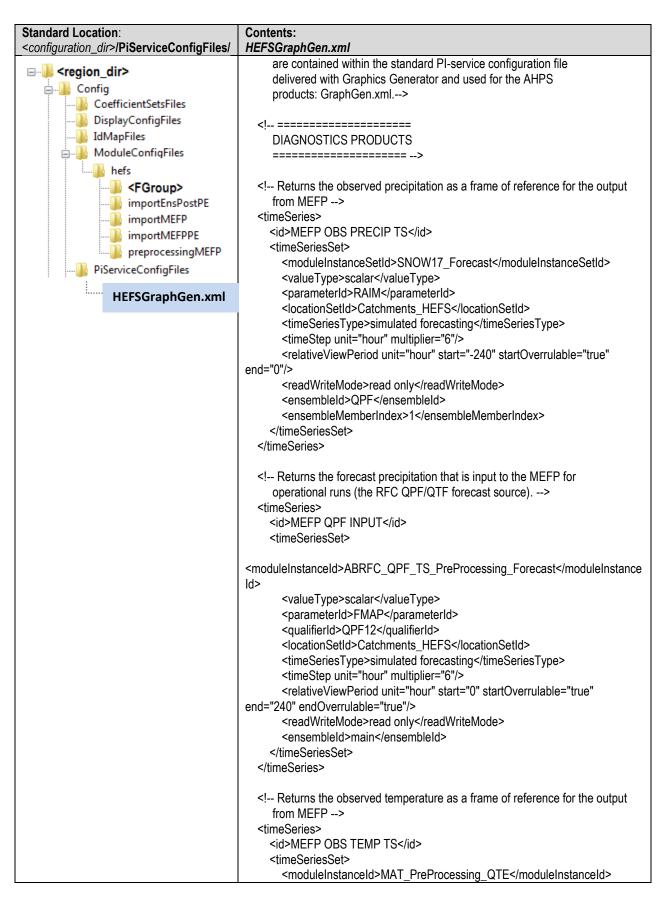

Standard Location:	Contents:
<pre><configuration_dir>/PiServiceConfigFiles/</configuration_dir></pre>	HEFSGraphGen.xml
vooringurution_un*n teetvieesemigr nesi	<pre><valuetype>scalar</valuetype></pre>
	Returns the forecast temperature that is input to the MEFP for operational runs (the RFC QPF/QTF forecast source) <timeseries></timeseries>
	<timeseriestype>external forecasting</timeseriestype> <timestep multiplier="6" unit="hour"></timestep> <relativeviewperiod end="240" endoverrulable="true" start="0" startoverrulable="true" unit="hour"></relativeviewperiod> <readwritemode>read only</readwritemode> <ensembleid>main</ensembleid>
	Returns the precipitation ensemble output by the MEFP <timeseries></timeseries>
	Returns the temperature ensemble output by the MEFP <timeseries></timeseries>

Standard Location:	Contents:
<pre><configuration_dir>/PiServiceConfigFiles/</configuration_dir></pre>	HEFSGraphGen.xml
<u> </u>	<tire>timeStep unit="hour" multiplier="6"/></tire>
	<readwritemode>read only</readwritemode>
	<pre><ensembleid>MEFP</ensembleid></pre>
	Returns the observed time series that</th
	corresponds to the OPERATIONAL FLOW TS specified
	below. If no such observed time series exist,
	leave this unchanged, but note that the observed
	time series will not be displayed on streamflow
	products and a warning message will be generated>
	<timeseries></timeseries>
	<id>OBSERVED FLOW</id>
	<timeseriesset> <moduleinstancesetid>EnsPost_Input</moduleinstancesetid></timeseriesset>
	<nl><nloculer <="" istance="" nloculer="" setto="</th" stance=""></nloculer></nl>
	<pre><pre><pre><pre><pre><pre><pre><pre></pre></pre></pre></pre></pre></pre></pre></pre>
	<locationsetid>Gages_HEFS</locationsetid>
	<timeseriestype>simulated forecasting</timeseriestype>
	<timestep multiplier="6" unit="hour"></timestep>
	<readwritemode>read only</readwritemode>
	<ensembleid>main</ensembleid>
	VillileSeries
	Returns the operational (single-valued) forecast</th
	or simulated time series that corresponds to the
	FLOW RAW OUTPUT below. This should use the same
	timeSeriesSet as FLOW RAW OUTPUT, but with
	ensembleld "main"> <timeseries></timeseries>
	<id>OPERATIONAL FLOW FORECAST</id>
	<tireseriesset></tireseriesset>
	<moduleinstancesetid>EnsPost_Input</moduleinstancesetid>
	<valuetype>scalar</valuetype>
	<pre><parameterid>QINE</parameterid></pre>
	<locationsetid>Gages_HEFS</locationsetid>
	<timeseriestype>simulated forecasting</timeseriestype>
	<timestep multiplier="6" unit="hour"></timestep> <readwritemode>read only</readwritemode>
	<pre><readwhitewoode <ensembleid="" only<="" read="" readwhitewoode="">main</readwhitewoode></pre> /readwhitewoode/
	Returns the flow ensemble before ensemble post-processing.</th
	If the post-processor is not applied, this can be any
	flow ensemble you wish to display in the product>
	<timeseries> <id>FLOW RAW OUTPUT</id></timeseries>
	<tireseriesset></tireseriesset>
	<moduleinstancesetid>EnsPost_Input</moduleinstancesetid>
	<valuetype>scalar</valuetype>
	<pre><parameterid>QINE</parameterid></pre>

Standard Location:	Contents:
<pre><configuration_dir>/PiServiceConfigFiles/</configuration_dir></pre>	HEFSGraphGen.xml
	<pre><locationsetid>Gages_HEFS</locationsetid> <timeseriestype>simulated forecasting</timeseriestype> <timestep multiplier="6" unit="hour"></timestep> <readwritemode>read only</readwritemode> <ensembleid>MEFP</ensembleid> </pre>
	<pre> <!-- Returns the HFES EnsPost post-processed flow ensemble--></pre>
	<pre><readwritemode>read only</readwritemode> <ensembleid>HEFSENSPOST</ensembleid> <!--</td--></pre>
	SHORT-RANGE PRODUCT ============> Returns the observed flow time series
	<timeseries> <id>SHORT-RANGE OBS FLOW</id> <timeseriesset> <moduleinstancesetid>EnsPost_Input</moduleinstancesetid> <valuetype>scalar</valuetype> <parameterid>QINE</parameterid> <locationsetid>Gages_HEFS</locationsetid> <timeseriestype>simulated forecasting</timeseriestype> <timestep multiplier="6" unit="hour"></timestep> <readwritemode>read only</readwritemode> <ensembleid>main</ensembleid> </timeseriesset> </timeseries>
	Returns the ensemble to use to build the cone of uncertainty <timeseries></timeseries>

Standard Location: <pre><configuration_dir> PiServiceConfigFiles </configuration_dir></pre>	Contents: HEFSGraphGen.xml
y	
	Viewsriservicecomig/

2.4.2 Modify File Added in Step 2.1: IdExportHEFSGraphGen.xml (Optional)

EARLIER VERSIONS OF PRODUCTS ALREADY INSTALLED

This step can be skipped; no further changes should be necessary.

Perform this step only if necessary due to the locationIds of time series defined within the HEFSGraphGen.xml PI-service configuration file; see condition below.

Action: Modify the file

<configuration_dir>/IdMapFiles/IdExportHEFSGraphGen.xml

to define id-mappings necessary for the display of the HEFS products. Details are below.

Description: The file is a standard id-mapping applied to the output from the PI-service queries defined in HEFSGraphGen.xml.

All Graphics Generator HEFS products are designed to expect all time series to have the same locationId and for that to match the segment id for streamflow products or the MEFP catchment id for the MEFP Results product.

Therefore, id-mapping changes may be necessary if the following condition is met for at least one of the catchments or segments for which products are to be constructed:

• The time series returned by the PI-service for one catchment or segment, for all queries, and for the same type of data, either meteorological forcings (precipitation/temperature) or streamflow, can contain time series with more than one locationId.

Most often, this condition will only be met for streamflow queries. For example, this condition is true if the queries with ids "OBSERVED FLOW" and "OPERATIONAL FLOW FORECAST" are both to be displayed and return time series for the same segment that have different locationIds. Usually for precipitation or temperature queries, the time series returned for a catchment have locationIds that match the MEFP catchment id (though a segment may have multiple applicable catchments, only if one of those catchments satisfies the condition above should an id-mapping be needed).

If the condition is met, id-mappings should be defined to map the returned locationIds to the appropriate segment id (for streamflow) or catchment id (for precipitation and temperature). The following example displays id-mappings defined for MARFC for two segments, WALN6DEL and CNNN6DEL, in order to produce HEFS products (as well as other products):

Standard Location:	Contents:
<pre><configuration_dir>/IdMapFiles</configuration_dir></pre>	IdExportHEFSGraphGen.xml
	<pre><?xml version="1.0" encoding="UTF-8"?> <idmap"> <!-- Map all WALN6 output to the segment id, WALN6DEL--> <location external="WALN6DEL" internal="WALN6TOT"></location> <location external="WALN6DEL" internal="WALN6PPP"></location> <location external="WALN6DEL" internal="WALN6DEL"></location> <!--identity map--> <location external="WALN6DEL" internal="WALN6DEL"></location></idmap"></pre>
IdExportHEFS GraphGen.xml	Map all CNNN6 output to the segment id, CNNN6DEL <location external="CNNN6DEL" internal="CNNN6TOT"></location> <location external="CNNN6DEL" internal="CNNN6PPP"></location>
	<pre><location external="CNNN6DEL" internal="CNNN6TIF"></location></pre>

In both cases, multiple locationIds for streamflow data are mapped to the segment id. Nothing needs to be done for the precipitation and temperature, since all precipitation and temperature time series have the same locationId for all catchments for each segment (in this case, WALN6DEL and CNNN6DEL both include only one catchment and that catchment will be identified by an HEFS product-specific argument; see Section 2.5).



• Any mapping for a given <u>external</u> id must include an *identity mapping*, which maps the id onto itself. For example (as shown above):

<location external="WALN6DEL" internal="WALN6DEL"/>

• For streamflow, if the time series returned by the PI-service always have the same locationId (therefore, not satisfying the above condition), but that locationId does not match the segment id defined in Topology.xml, an id-mapping can be used (do not leave out the identity mapping!). However, it may be preferable to use tools available via the **GraphGen Tree Panel** to modify the settings for the segment; see Section 6.1.1 of the *Graphics Generator AHPS Products*Installation Guide delivered with CHPS.

2.4.3 Modify Existing File: ThresholdValueSets.xml (Optional)

EARLIER VERSIONS OF PRODUCTS ALREADY INSTALLED

If you setup the thresholds to be visible for the earlier release of the HEFS products, no further changes should be necessary; skip this step. Otherwise, note that the time series returned by the OBSERVED FLOW and/or OPERATIONAL FLOW FORECAST queries described in Section 2.4.1 should include the thresholds to be displayed in the products that start with "HEFS EnsPost". The time series returned by SHORT-RANGE OBS FLOW, which should match that returned by OBSERVED FLOW, should include the thresholds to be displayed in the "Short-Range Probabilistic Guidance" product. Make changes as described below relative to the time series returned by those PI-service queries if necessary.

If thresholds are not to be displayed on the HEFS streamflow products, skip this step. See the note below for a description of the warning message will be displayed if this step is skipped.

Action: Modify the file

<configuration_dir>/RegionConfigFiles/ThresholdValueSets.xml

if necessary to define thresholds that can be displayed in the HEFS products. The HEFS products make use of the same thresholds used for the AHPS products. See Section 2.1.3 of the *Graphics Generator AHPS Products Installation Guide* for how to modify the ThresholdValueSets.xml file and troubleshooting tips related to the thresholds.

Typically, the queries that return non-ensemble time series provide the thresholds for display in HEFS products. This is because often those time series already have associated thresholds defined within the ThresholdValueSets.xml configuration file. If this is not the case, then modify the ThresholdValueSets.xml file accordingly. For example, for the short-range probabilistic guidance product, the time series returned by the query SHORT-RANGE OBS FLOW should provide the thresholds. For the HEFS EnsPost Input and Output products, the OBSERVED FLOW or OPERATION FLOW FORECAST queries should provide thresholds.



If thresholds are not available when generating a product, a warning will be displayed during product generation in the CHPS **Logs Panel** when generated via the Graphics Generator FEWS plug-in components or the diagnostics (diag.xml) file created when generated via the GraphGenModelAdapter. The output products will still be generated. This warning message will be displayed if this step was skipped.

2.5 Complete HEFS Product Configuration (Required)

EARLIER VERSIONS OF PRODUCTS ALREADY INSTALLED

To update the products for the new release, perform all of the steps below. However, note that most of the settings will already be set correctly. You should only need to modify/override settings that are are added for a new release. For example, the hefsShortRangeObsFlowLocationId and hefsShortRangeEnsembleFlowLocationId arguments were added for HEFS 1.2.1.

Action: Use the Graphics Generator components to complete the installation of the HEFS products. General steps that must be performed are described below. For a detailed description of how to perform these steps, see Section 2.3 of the *Graphics Generator AHPS Products Installation Guide*.

The steps are as follows:

- 1. Start CHPS.
- 2. Set the FEWS PI-service port number; see Section 2.3 of the *Graphics Generator Tips* and *Troubleshooting Guide*.
- 3. Use **Product and Template Manager Dialog** to import products from the file

<tar_root_dir>/graphgen/installFiles/hefsInstallationImport.xml

The **Product and Template Manager Dialog** is opened by clicking on the **Manage**

Products Button, in the toolbar of the **GraphGen Tree Panel**. See the description below for a list of the templates included in this release.

4. Use the **Modify Settings Dialog** to import settings from the file

<tar_root_dir>/graphgen/installFiles/hefsSettingsImport.xml

<u>Do not discard existing settings</u> (i.e., click **Yes** when the **Keep Existing Settings? Dialog** opens)! The **Modify Settings Dialog** is opened by clicking on the **Change Default**

Settings Button, , in the toolbar of the GraphGen Tree Panel.

5. Override the settings as needed for any segments for which products are to be displayed. See the table below for the settings that must be specified.

- 6. Move products to be used from the "deliveredHEFSProducts" group to the "all segments" group. Remove (or rename) the group "deliveredHEFSProducts" to avoid future confusion, since the group will be used for future product releases as well.
- 7. Create additional "MEFP Results" products as needed. This is required if any segments for which products are to be created includes more than one catchment. See Section 6.1.1 herein for instructions on how to do so.

Description: The Graphics Generator templates and templates delivered with this release of HEFS are as follows (alphabetical order may not match how it appears in the **GraphGen Tree Panel**):

- Referenced Templates
 - EnsPost Fcst Flow/Stage TS
 - EnsPost Obs Flow/Stage Input
 - o HEFS Quartile Spread
 - o HEFS Short-Range Obs Flow
 - o HEFS Short-Range Cone
 - o HEFS Short-Range Median
 - o HEFS Spaghetti
 - o MEFP Obs Precip TS
 - o MEFP Obs Temp TS
 - o MEFP QPF Input
 - o MEFP QTF Input
- Product Templates (initially installed in the "deliveredHEFSProducts" group)
 - o HEFS EnsPost Input
 - o HEFS EnsPost Output
 - o HEFS Short-Range Prob Guidance
 - o MEFP Results

The streamflow products, HEFS EnsPost Input and HEFS EnsPost Output, make use of the default, predefined argument used by Graphics Generator: defaultLocationId. For a segment, this argument defines the locationId that is expected in all time series returned by the FEWS PIservice. By default, the defaultLocationId is set to the segment id of the forecast segment. See Section 6.1.1 of the *Graphics Generator AHPS Products Installation Guide* for instructions on when and how to override its value.

The MEFP Results product, which displays MEFP output by catchment, makes use of HEFS-specific argument mefpCatchment#, described below. They do not use the defaultLocationId. See below and Section 6.1.1 for instructions on how to set its value.

The HEFS Short-Range Prob Guidance product makes use of arguments specific to HEFS and defined below: hefsShortRangeObsFlowLocationId, hefsShortRangeEnsembleFlowLocationId, and

hefsFlowThresholdParameterld. Other arguments defined for the AHPS products, listed next, are also used to identify thresholds and the display time zone.

The following arguments are used for the HEFS products and assumed to have already been setup for the AHPS products: ahpsDisplayTimeZone, ahpsMinorFloodingThresholdld, ahpsModerateFloodingThresholdld, ahpsMajorFloodingThresholdld. See the *Graphics Generator AHPS Products Installation Guide* for information about these arguments.

The following arguments are specific for the HEFS products and must be set in Step 4 above (using the **Modify Settings Dialog**):

Argument Name	Recommended Value	Description
hefsShortRangeObsFlowLocati onId (added for HEFS 1.2.1)	@defaultLocationId@ (the same value used for the AHPS products, if they were installed)	The locationId of the time series returned by the query SHORT-RANGE OBS FLOW, possibly impacted by an id-mapping (see Section 2.4.1). Typically, this should be the defaultLocationId setup for use with the AHPS prodcuts (which should typically be the segment id), as shown in the recommended value. This is used to acquire the data and to identify the thresholds displayed in the short-range probabilistic guidance product.
hefsShortRangeEnsembleFlowL ocationId (added for HEFS 1.2.1)	@defaultLocationId@ (the same value used for the AHPS products, if they were installed)	The locationId of the time series returned by the query SHORT-RANGE ENSEMBLE FLOW, possibly impacted by an id-mapping (see Section 2.4.1). Typically, this should be the defaultLocationId setup for use with the AHPS prodcuts (which should typically be the segment id), as shown in the recommended value. This is used to acquire the ensemble from which the cone of uncertainty and median are calculated for the short-range probabilistic guidance product.
hefsFlowThresholdParameterId	Time series specific (default is QINE)	The parameterId of the time series through which the thresholds are made available. Most often, this is the parameterId of the time series returned by the SHORT-RANGE OBS FLOW (see Section 2.4.1) and is likely either QIN or QINE. This argument is used in the short-range probabilistic guidance product to identify the thresholds to be displayed (along with the hefsShortRangeObsFlowLocationId and the AHPS threshold arguments previously mentioned).

mefpCatchment#

@overrideActiveSegmentId@ (defaults to active forecast segment id)

Only use the default if the locationId of the FMAP/FMAT ensembles output by MEFP to be displayed in the product is identical to the segment id. In all other cases, set the mefpCatchment# argument value to the appropriate locationId for the FMAP/FMAT ensembles output from MEFP (which should both have the same locationId).

The locationId of time series of FMAP and FMAT acquired by Graphics Generator via the FEWS PI-service for <u>one</u> catchment. It is the locationId of time series returned by the temperature and precipitation queries setup in the HEFSGraphGen.xml; see Section 2.4.1.

The # indicates the catchment number for a given catchment within the active segment. For example, if the segment includes only a single catchment, define the argument "mefpCatchment1". If it includes two catchments, then two arguments should be defined: "mefpCatchment1" and "mefpCatchment 2". And so on.

By default, only a single "MEFP Results" product is provided for displaying the results for one catchment within a Segment (displaying products for argument "mefpCatchment1"). See Section 6.1.1 for instructions on creating additional MEFP Results products.

Override these settings as needed for each segment for which products are to be generated. Follow the instructions provided in Section 2.3 of the *Graphics Generator AHPS Products Installation Guide* to override the settings for each segment.

2.6 Verify HEFS Product Configuration (Required)

Action: Use CHPS and the Graphics Generator components to verify the installation of the HEFS products. General steps that must be performed are described below.

For a detailed description of how to perform these steps, see Section 2.4 in the *Graphics Generator AHPS Products Installation Guide*, which pertains to verifying the AHPS products installation.

The steps are as follows:

- 1. Start CHPS.
- 2. Set the FEWS PI-service port number; see Section 2.3 of the *Graphics Generator Tips* and *Troubleshooting Guide*.
- 3. Use the CHPS **Manual Forecast Dialog** to execute the HEFS workflows (if not already executed). This may include running the MEFP_Forecast workflow and associated streamflow and EnsPost workflows, which may be forecast group specific.
- 4. Select an active forecast segment from the CHPS **Forecasts Panel**. Be sure to click on the **View Mode Button** to switch to view mode; otherwise CHPS will execute the segment's operational forecasts when the segment is selected.
- 5. Use the CHPS **Database Viewer** to confirm that ensembles were created.
- 6. Open the **GraphGen Thumbnails Panel**. The HEFS Graphics Generator products listed in Section 2.5 should be displayed as thumbnails (templates will not be displayed).
- 7. Use the **GraphGen Viewer Panel** to confirm that the products are displayed correctly, comparing results with those shown in the **Database Viewer** as needed.

Description: Verifying HEFS product configuration requires generating products and viewing them, which, in turn, requires that the needed time series and ensembles are generated.

3 Setting Up Automated Graphics Generator Workflows

This section provides instructions for setting up scheduled tasks in CHPS to execute workflows that generate the HEFS products output files.

The steps in Section 3.1 of the *Graphics Generator Installation Guide* must be performed before completing these steps.

3.1 Configuration File Changes (All Steps Required)

Described below are changes that must be made to the configuration files in order for a workflow to be constructed that generates the Graphics Generator products, using HEFS products as an example.

3.1.1 Modify File Added in Step 2.1: GraphGen_HEFS_Products.xml

EARLIER VERSIONS OF PRODUCTS ALREADY INSTALLED

Modify the pattern used as needed to account for new template ids for this release. For example, in HEFS 1.2.1, the product template with id "HEFS Short-Range Probabilistic Guidance" was added, so that the pattern "HEFS Short-Range.*" should be added to the products properties.

Action: Modify the file

<configuration_dir>/ModuleConfigFiles/hefs/GraphGen_HEFS_Products.xml

Replace segment/d# with the installation segments (one line must be added per segment).

Description: The module generates all HEFS products for all segments for which products are to be generated. The default file provided with the release is for ABRFC, with the line that contains *segmentld#* being as follows (it is highlighted in the example provided below):

<string key="products.CBNK1" value="HEFS Short-Range.*;MEFP Results.*;HEFS EnsPost.*"/>

This line must be changed to reflect the correct segment id replacing "CBNK1". One line with the same value must then be included for each segment for which products will be generated.




- The HEFS products are currently configured to generate the following output files (product id file created under baseOutputDir):
 - <segmentId>.shortrange.hefs.png one per segment displaying the official short-range probabilistic guidance product.
 - <segmentId>.HEFS.EnsPost.Input.png one per segment displaying streamflow ensembles that would typically be input to EnsPost (if EnsPost is installed)
 - <segmentId>.HEFS.EnsPost.Output.png one per segment displaying output from HEFS EnsPost
 - <mefpCatchmentId>.HEFS.MEFP.png one per catchment within each segment, displaying the 6-hour FMAP and FMAT output of the MEFP workflow.
- The short-range probabilistic guidance product is the only one intended for dissemination. As such, you may not want to routinely generate the other output files, being intended only for internal, diagnostic purposes. If that is the case, modify the value attribute of the products.<segment id> property (example for CBNK1 shown above) to include only the following: "HEFS Short-Range*".



- The configuration depends upon the global properties piServiceBackendRFCldentifier, piServiceHostName, and piServicePortNumber being defined; see Section 3.1.2 of the *Graphics Generator Installation Guide*.
- The configuration depends upon the global property HEFS_PRODUCTS_DIR being defined. See Section 2.3 for instructions to define the testing property and Section 4.2 for the central property.

Standard Location:	
<pre><configuration_dir>/ModuleConfigFil</configuration_dir></pre>	Contents:
es/hefs/	GraphGen_HEFS_Products.xml

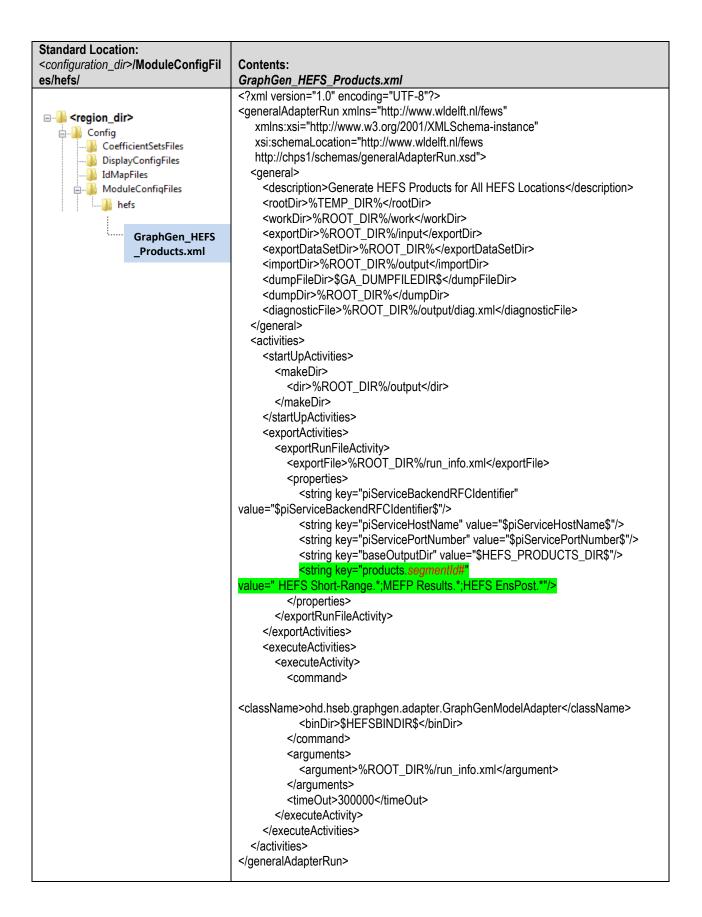

3.1.2 Modify Existing File: ModuleInstanceDescriptors.xml

Action: Define new module instance descriptors in the file

<configuration_dir>/RegionConfigFiles/ModuleInstanceDescriptors.xml

See the example below for text to add immediately before the closing "</moduleInstanceDescriptors>" at the end of the file. A sample is provided here:

<tar_root_dir>/graphgen/samples/Config/RegionConfigFiles/ModuleInstanceDescriptors.xml

Description: Modified to add modules to generate the HEFS Graphics Generator products.



- The module instance group defined below with the id "GraphicsGenerator" may have already been added as part of installing the AHPS products (see the *Graphics Generator AHPS Products Installation Guide*). If so, then add the descriptor added below to that module instance group.
- The added module is the one modified in Step 3.1.1 that executes the GraphGenModelAdapter to generate the HEFS products.

Standard Location:	Contents:
<pre><configuration_dir>/RegionConfigFiles/</configuration_dir></pre>	ModuleInstanceDescriptors.xml
<region_dir> Config CoefficientSetsFiles DisplayConfigFiles IdMapFiles ModuleConfiqFiles</region_dir>	<pre><?xml version="1.0" encoding="UTF-8"?> <moduleinstancedescriptor <="" th="" xmlns="http://www.wldelft.nl/fews"></moduleinstancedescriptor></pre>
hefs	ADDED FOR HEFS - GRAPHGEN ====================================</th
FGroup> importEnsPostPE importMEFP importMEFPPE importMEFPPE importMEFPPE importMEFPPE importMEFPPE importMEFPPE importMEFPPE importMEFPPE importMEFPPE importMEFP importMEFPE importMEFPE importMEFP importMEFPE importMEFP importMEF	<pre><moduleinstancegroup id="GraphicsGenerator"> <moduleinstancedescriptor id="GraphGen_HEFS_Products"> <moduleid>GeneralAdapter</moduleid> </moduleinstancedescriptor> </moduleinstancegroup></pre>
	END OF HEFS - GRAPHGEN ====================================</th
ModuleInstance Descriptors.xml	

3.1.3 Modify Existing File: WorkflowDescriptors.xml

Action: Define new workflow descriptors in the file

<configuration_dir>/RegionConfigFiles/WorkflowDescriptors.xml

See the example below for text to add immediately before the closing </workflowDescriptors> at the end of the file. A sample is provided here:

<tar_root_dir>/graphgen/samples/Config/RegionConfigFiles/WorkflowDescriptors.xml

Description: The added workflow is used to execute the GraphGen module created previously. The name of the workflow is GraphGen_HEFS_Create_Products and the workflow configuration file was put in place in Section 2.1.

Standard Location:	Contents:
<pre><configuration_dir>/RegionConfigFiles/</configuration_dir></pre>	WorkflowDescriptors.xml
□··· Config □··· Config □··· CoefficientSetsFiles	<pre><?xml version="1.0" encoding="UTF-8"?> <workflowdescriptors <="" th="" xmlns="http://www.wldelft.nl/fews"></workflowdescriptors></pre>
	ADDED FOR HEFS - GRAPHGEN ====================================</th
FGroup> importEnsPostPE importMEFP importMEFPPE importMEFPPE preprocessingMEFP PiServiceConfigFiles RegionConfigFiles	<pre><workflowdescriptor forecast="true" id="GraphGen_HEFS_Create_Products" name="GraphGen HEFS Create Products" visible="true"> <description>Create GraphGen Products</description> </workflowdescriptor> <!-- END OF HEFS - GRAPHGEN ====================================</th--></pre>
Workflow Descriptors.xml	

3.2 Test the Changes

This testing is done in the *installation stand-alone*.

Action: Modify the file

<configuration_dir>/ModuleConfigFiles/hefs/GraphGen_HEFS_Products.xml

Comment out the lines that define the piService* run file properties, highlighted below:

These lines force the GraphicsGeneratorModelAdapter to run using the backend PI-service. By commenting them out, the adapter will use the PI-service connection established when running the *installation stand-alone*.

Action: Start CHPS. Execute the workflow GraphGen_Create_HEFS_Products created in Section 3.1 via the CHPS interface **Manual Forecast Dialog** as normal (start CHPS, set the PIservice port number, open the panel, show all workflows, select the workflow, and click **Run**). If executed successfully, the HEFS product files will be created in the *installation stand-alone* products directory (i.e., cproducts_dir) specified by the baseOutputDir run file property (see Section 3.1.1). The images will appear similar to those shown in Section 1.

If not successful, examine the **Logs Panel** of the CHPS interface and check the trouble shooting in Section 6 of the *Graphics Generator AHPS Products Installation Guide* and check the *Graphics Generator Tips and Troubleshooting Guide*.

4 Synchronizing Changes to the Central Server

Synchronize (upload) the changes made to the configuration and Graphics Generator products and settings to the central server. General instructions are provided in the *Graphics Generator Installation Guide*.

Action: Select an appropriate <u>central</u> HEFS products directory where HEFS product files created by Graphics Generator will be output when generated by a scheduled workflow.



An appropriate central products output directory may have already been identified and created during installation of Graphics Generator; see Section 3.1.1 of the *Graphics Generator Installation Guide*. You may want to create an HEFS subdirectory of that directory and let that serve as the central HEFS products directory, denoted below as *<central products_dir>*.

Description: The directory must not be specific to the *installation stand-alone*. Rather, it must be a central shared directory as it will be referenced by all sessions of CHPS that are not standalones (e.g. Forecast Shell Servers – fss) and that execute the Graphics Generator to generate HEFS product files. For example, the directory referenced by \$EXPORT_FOLDER\$ or \$EXPORT_DIR\$ in the fss global properties file is a commonly used central directory for storing data generated by executing CHPS.

Action: Create the central HFS products directory if it does not yet exist:

mkdir < central products dir>

4.2 Modify FSS Global Properties (Required)

Action: For each FSS##, open the following file for editing (replace?? with the lower case 2-letter RFC abbreviation):

/awips/chps_local/fss/??rfc/FSS##/FewsShell/??rfc/fss_global.properties

Add the following properties:

HEFS_PRODUCTS_DIR=<central products_dir>piServiceBackendRFCIdentifier=??rfc_pipiServiceHostName=localHostpiServicePortNumber=<service number>



The piService* properties may already be defined as part of the standard Graphics Generator installation. No change should be needed. See Section 3.1.2 of the *GraphGen Installation Guide*.

4.3 Synchronize Configuration Changes (Required)

Action: Upload configuration changes to the central server. Use the FEWS configuration manager (cm) tool for installing the files in the central server (place the changes in the FEWS OC, validate, and synchronize/upload the changes).

Description: See Section 1.5 for the configuration files that must be uploaded.



After making changes to the FEWS OC, you can repeat Section 2.6 to verify that the HEFS products are installed correctly in the OC. Start the OC and proceed to Step 1 in that Section.

5 Creating the Scheduled Task

In order to generate the HEFS product output (image files and ASCII tabular files), a scheduled task must be added. Perform the following action to do so:

Action: Create a scheduled task to execute the workflow GraphGen_Create_HEFS_Products. Use the FEWS admin interface provided by CHPS to add a workflow mapping and schedule the workflow to execute at an appropriate time. Make sure the workflow is executed after the ensemble workflows that yield the time series are completed and with a system time that matches those forecasts.

6 Tips and Trouble Shooting

For general trouble shooting and tips, see the *Graphics Generator Tips and Troubleshooting Guide*. Also, see Section 6 of the *Graphics Generator AHPS Products Installation Guide* for tips related to the AHPS products, which can be generalized and applied to the HEFS products as well (except for those dealing with probability plots, since there are no HEFS probability plots). HEFS specific tips and troubleshooting are provided below.


6.1 *Tips*


6.1.1 Adding MEFP Results Products for Additional Catchments


The release package includes only a single Graphics Generator product to display the output of the MEFP_Forecast workflow, therefore assuming only a single catchment exists per segment. In some cases, however, multiple catchments (e.g., an upper and a lower catchment) may exist for one forecast segment.


The instructions below describe how to create additional products to display the output for an additional catchment from the MEFP_Forecast workflow. The *catchment number* must be identified (1 for the first, default catchment; 2 for the next catchment; and so on). The locationId of the original catchment will be referred to as *<mefpCatchmentOrig>* below, while the locationId of the new catchment will be referred to as *<mefpCatchmentNew>*.

Before following the instructions below, start a CHPS session for which the localDataStore includes MEFP_Forecast workflow output for at least one segment with multiple catchments. If the changes are to be synchronized to the central server, be sure to start the CHPS session as an OC. Specify the PI-service port number and, in the CHPS **Forecasts Panel**, select the segment with multiple catchments to be the *active forecast segment* (see Section 1.2).

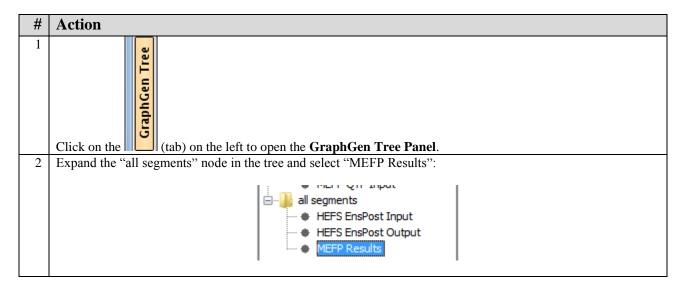

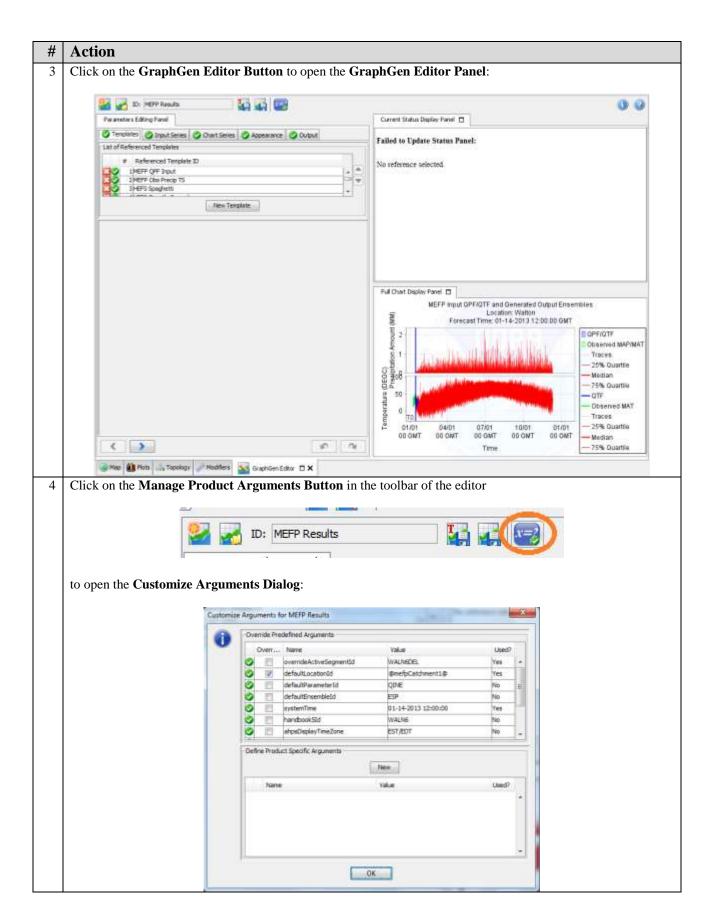

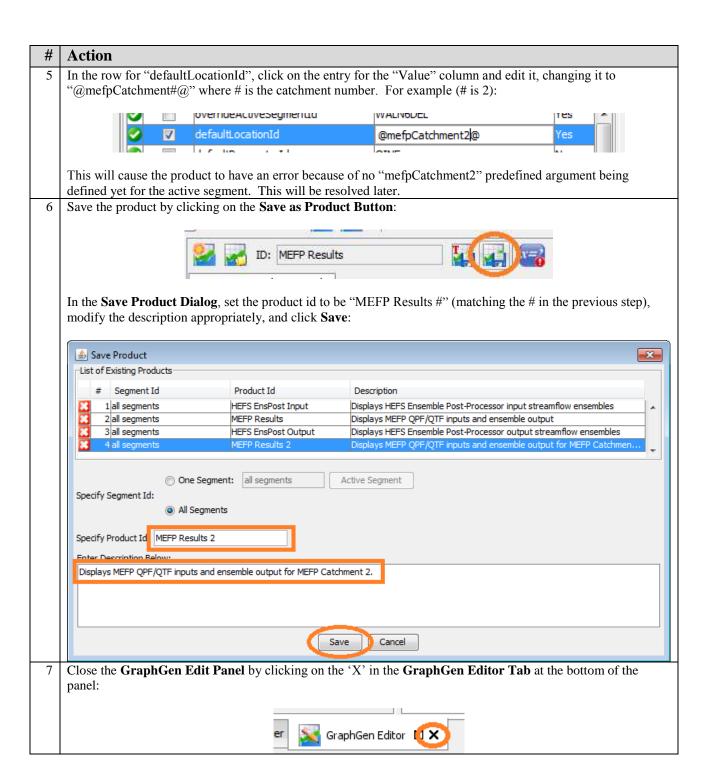


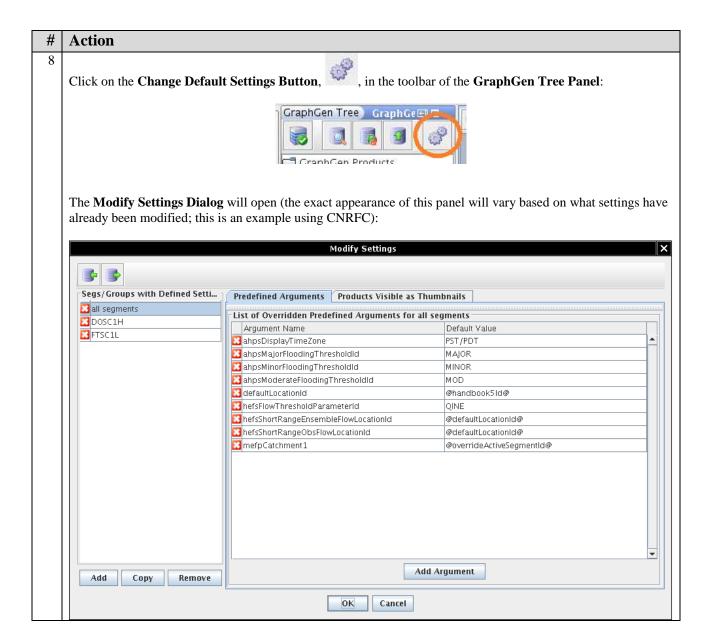


Action 9 Make the Products Visible as Thumbnails Panel active. In the "Visible?" column for the row corresponding to "MEFP Results #", select "No" so that the product is not visible, by default, as a thumbnail: | List of Products Defined for all segments | Source | Sou



 After selecting no and clicking off of the row, the color for the "Visible?" column will be red:



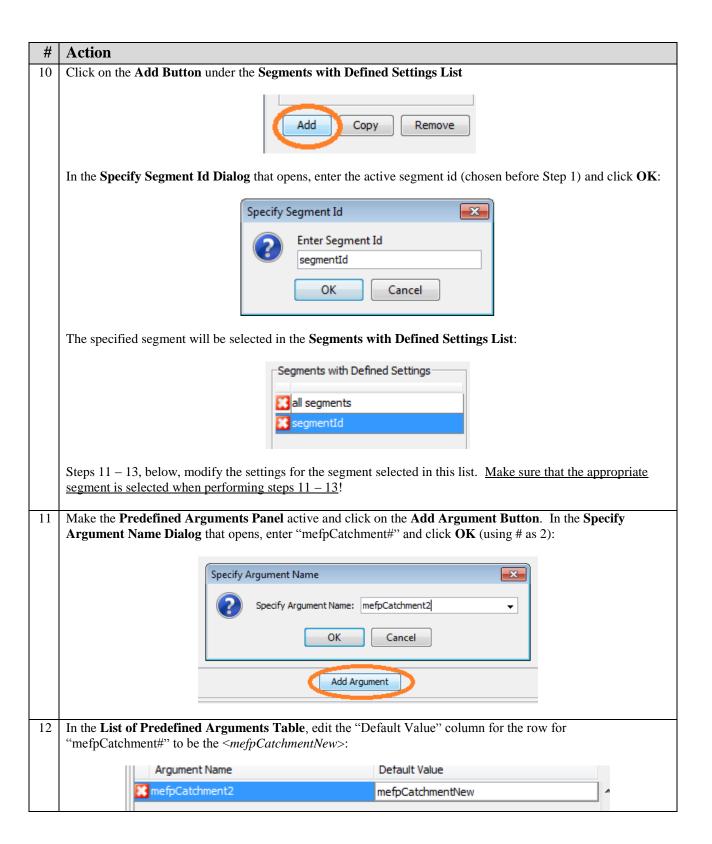


#	Action
13	Make the Products Visible as Thumbnails Panel active. In the "Visible?" column for the row corresponding to "MEFP Results #", select "Yes" so that the product is visible, as a thumbnail for the segment:
	Yes No MEFP Results 2
14	REPEAT Steps 10 – 13 for <u>every</u> segment for which a product "MEFP Results #" is needed. See Step 10: Make sure that the appropriate segment is selected when performing steps 11 – 13!
15	When done modifying settings, click OK to save the changes.
16	Verify the changes for the active segment by opening the GraphGen Thumbnails Panel . The products with ids "MEFP Results" and "MEFP Results #" should be visible and drawn correctly for all segments for which Steps $10-13$ were performed (as well as any other "MEFP Results #" already added).
17	Make the change permanent by clicking on the Upload Products Button in the GraphGen Tree Panel: GraphGen Tree GraphGen Products
	When the confirmation dialog opens, click Yes.

6.1.2 Turning Off Products for MEFP or EnsPost

To turn off products for MEFP or EnsPost, identify the products to "turn off" and either (1) remove the product or (2) make the product not visible as a thumbnail. For MEFP, the products affected have ids that start with "MEFP Results". For EnsPost, the products affected have ids that start with "HEFS EnsPost".

To remove the affected products, open the **GraphGen Tree Panel**, expand the "all segments" node and select the appropriate products (press the <Ctrl> key while clicking to select multiple products). Press the <Delete> key and, when the **Confirm DeleteDialog** opens, click **Yes**:

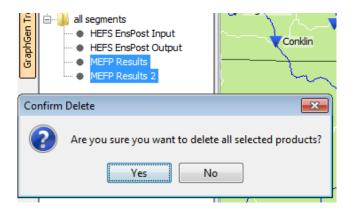

To make the affected products not visible as a thumbnail, see Section 2.6 of the *Graphics Generator Tips and Troubleshooting Guide*. You will first need to make the product not visible by default, modifying the visibility for "all segments" to be "No". Then, if the visibility was overridden for any segments, set the visibility for those segments to be "Default..." so that it uses the "all segments" default visibility of "No".

After making any changes, as always, click on the **Upload Products Button** in the **GraphGen Tree Panel** to make the changes permanent:



Lastly, if the products are being generated for any segment as part of a GraphGenModelAdapter module (see Section 3.1.1), then modify the appropriate module configuration files removing all references to the product. For example, to remove MEFP products in the default GraphGen_HEFS_Products.xml module configuration file, change

<string key="products.CBNK1" value="MEFP Results.*;HEFS EnsPost.*"/>

<string key="products.CBNK1" value="HEFS EnsPost.*"/>.

6.2 Troubleshooting

See the *Graphics Generator Tips and Troubleshooting Guide* and the *Graphics Generator AHPS Product Installation Guide*.